



Reference Guide: Kyocera Taskalfa 408ci

Device Panel Home Page, Copy, Send, Fax and KX Print Driver Overviews

ubeo
BUSINESS
SERVICES

○ Table of Contents

- 3** HOME SCREEN OVERVIEW
- 7** COPY
 - COPY / PRINT ENVELOPES
- 16** SEND
- 24** SAVING FAVORITES
- 26** FAX
- 29** FAX FORWARDING TO EMAIL
- 31** KYOCERA KX PRINT DRIVER OVERVIEW
 - ACCESSING KX DRIVER ON MAC



HOME SCREEN OVERVIEW




HOME SCREEN OVERVIEW

The Home Screen application icons can be customized.

To Customize, click on System Menu.

Next choose Function Settings, scroll down and choose Home. Icons can then be deleted or added. Copy and Send shortcuts can also be added to the Home Screen.

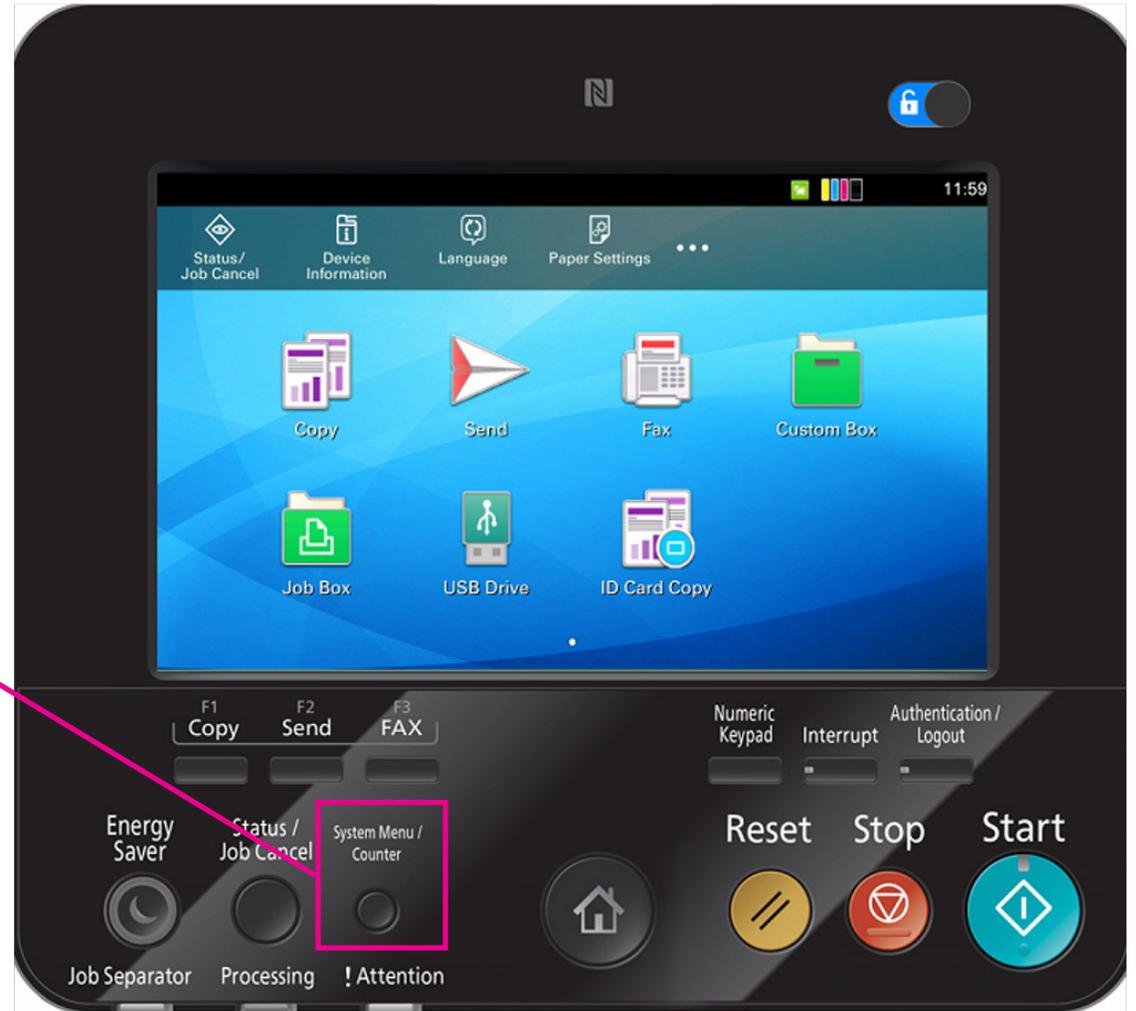

HOME SCREEN OVERVIEW

Status/Job Cancel view.
This includes pending
jobs and job logs.




HOME SCREEN OVERVIEW

To change Paper Settings,
Click on Paper Settings



Inside Paper Settings, click on a
paper cassette to change settings.

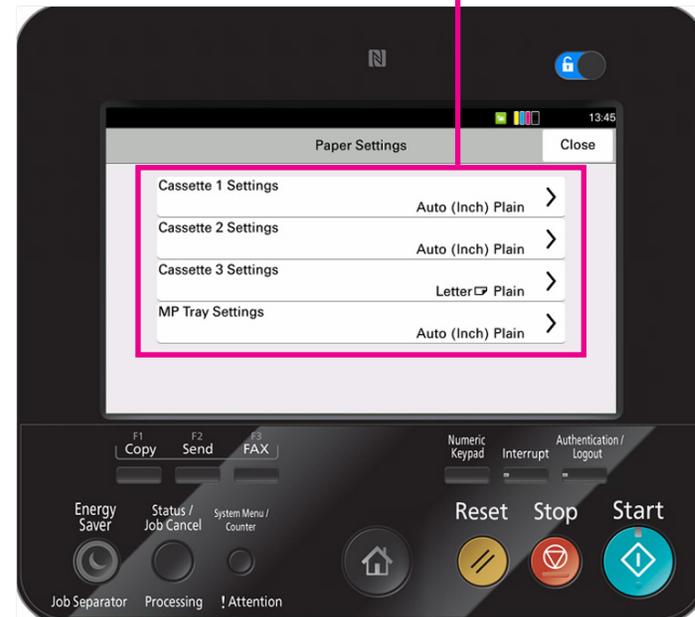

COPY

NOTE: The default view is Quick Setup. This Category displays common features and settings for basic copying.

The Copy application view includes a scrolling category list on the left.



The contents of the selected category will display on the right.

COPY



Paper Selection is set to Auto. The copy paper size will match the original paper size. Click to change to a specific paper drawer.

Color selection shows the current setting and can be changed to color or black & white.

Combine includes various combining options such as 2 up and 4 up on a page.

Staple will show staple position options.

Duplexing creates 2 sided documents or 1 sided documents from 2 sided originals.

Preview will show a preview before you begin copying.

Proof Copy will print a proof before printing additional copies.

Zoom includes several options for reducing or enlarging.

COPY

This view shows paper cassette options in Paper Selection.

Click on a paper cassette to change the setting.




The MP tray (Multi-Purpose Tray) is on the right side of the machine and is used for copying or printing onto various media types.

Click on the tray to change to a specific media/paper type.

COPY


Copying or Printing Envelopes using the MP Tray

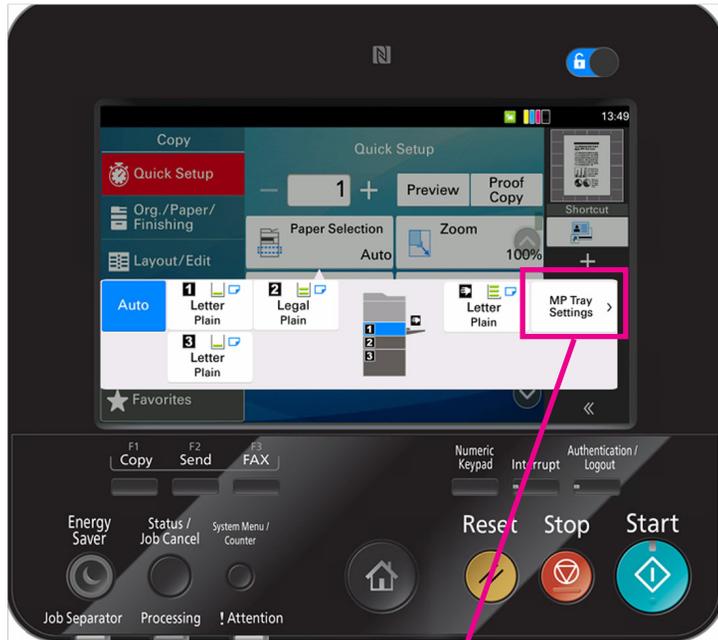


Click Paper Selection then click on MP Tray Settings.



Click Paper Size

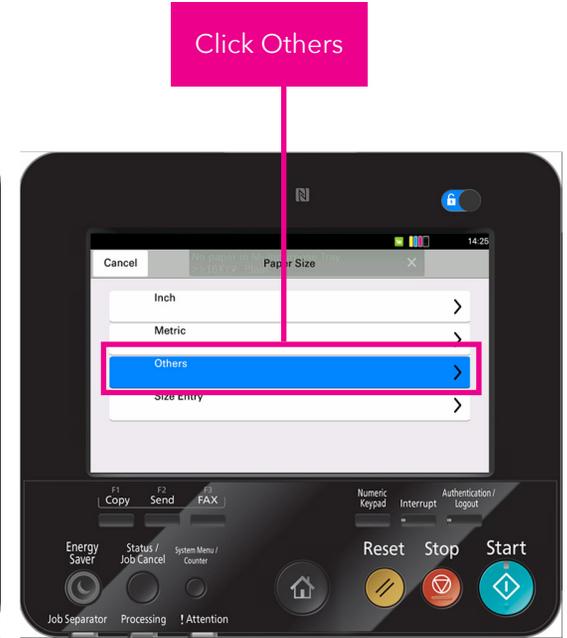

Click Others

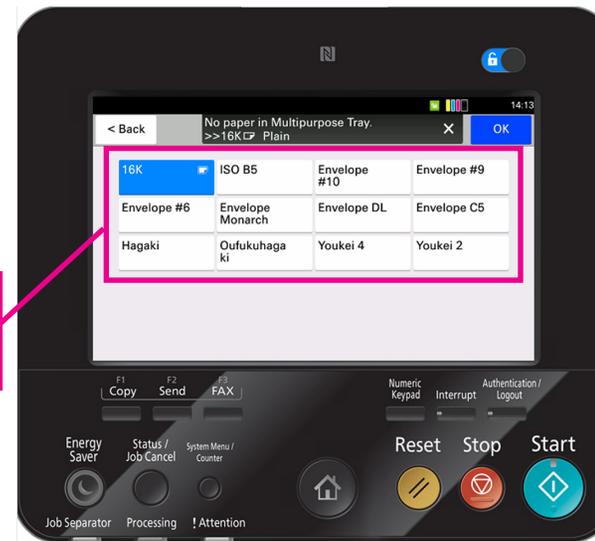

In Others, Choose the type of envelope.

COPY

Copying or Printing Envelopes using the MP Tray continued...

The image shows three sequential screenshots of a device's control panel, illustrating the steps to change the media type to Envelope. The device has a black control panel with a screen at the top and various buttons below. The screen displays a menu with options like Paper Size and Media Type. The buttons include Copy, Send, FAX, Energy Saver, Status / Job Cancel, System Menu / Counter, Reset, Stop, and Start. The screen also shows a status bar with a lock icon and the time.

Choose Media Type


Change to Envelope

Note: This is also where the MP tray can be changed to Thick paper, Cardstock, Labels and more.

Click OK.
The device is now ready to copy or print envelopes.

Media Type	Transparency	Rough	Vellum
Plain			
Labels	Recycled	Preprinted	Bond
Cardstock	Color	Prepunched	Letterhead
Thick	Envelope	Coated	High Quality
Custom 1	Custom 2	Custom 3	Custom 4
Custom 5	Custom 6	Custom 7	Custom 8


COPY

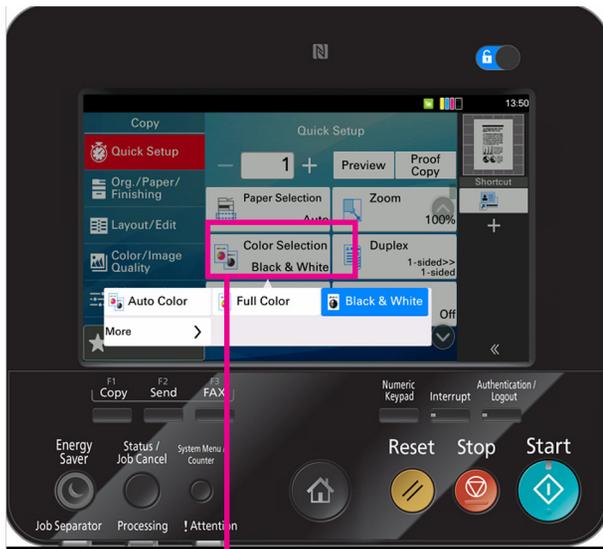

Color Selection shows 4 options. For a Color copies that include black & white and color pages within a document, choose Auto Color.




This view shows Duplex options.

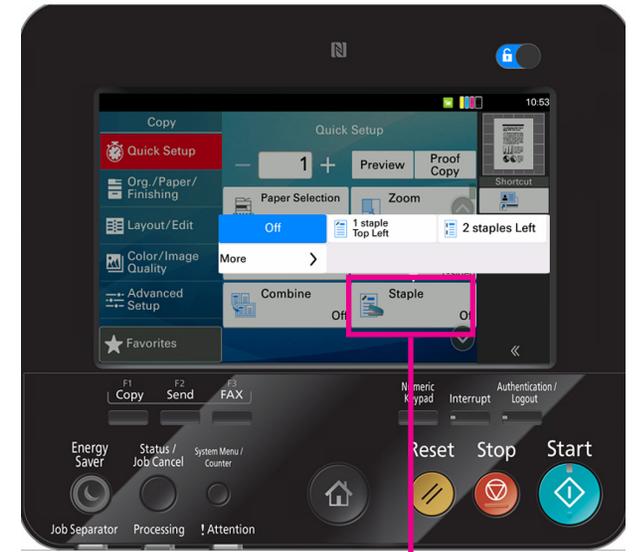

The Staple option shows the various staple positions available.


COPY

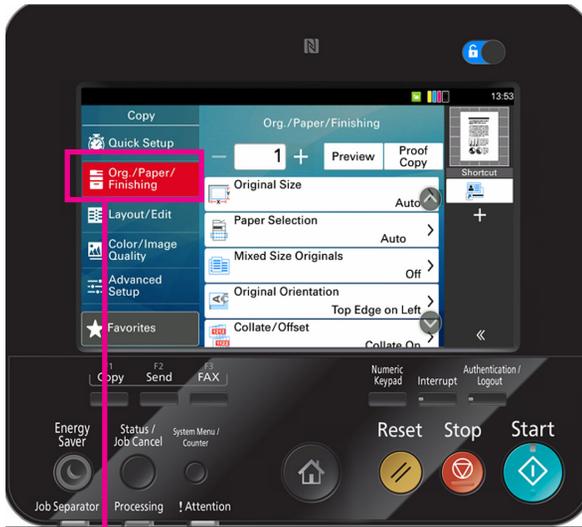

Orig./Paper/Finishing category:
This category includes additional options such as mixed size originals, original orientation and collate/offset.




Layout/Edit Category: This category includes additional options such as margin/centering, border erase and erase shadowed areas.

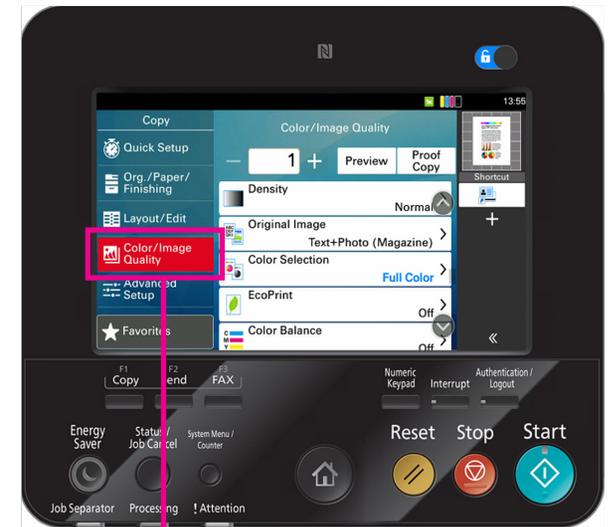


Color/Image Quality Category:
This category includes additional options such as Density, Eco Print and Color Balance.

COPY

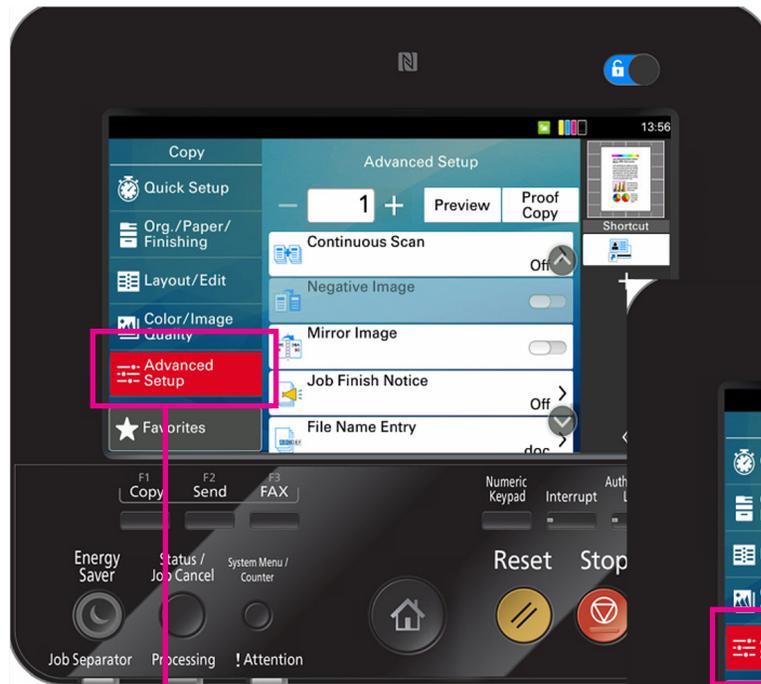


Advanced Setup Category: This category includes options such as continuous scan, Mirror Image, Job Finish Notice and more.

Advanced Setup Category Page 2: Additional options in this category include Priority Override, Repeat Copy, OHP Backing and more.

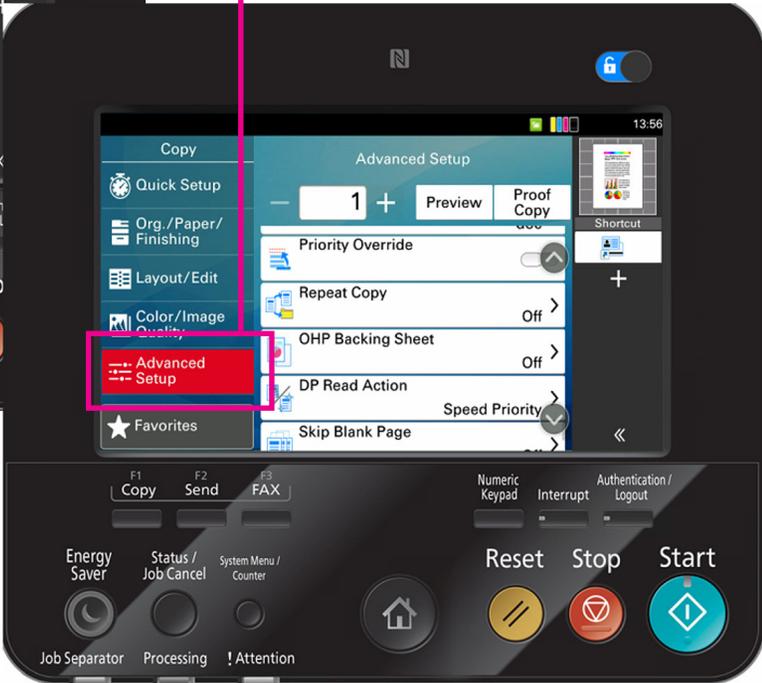


COPY

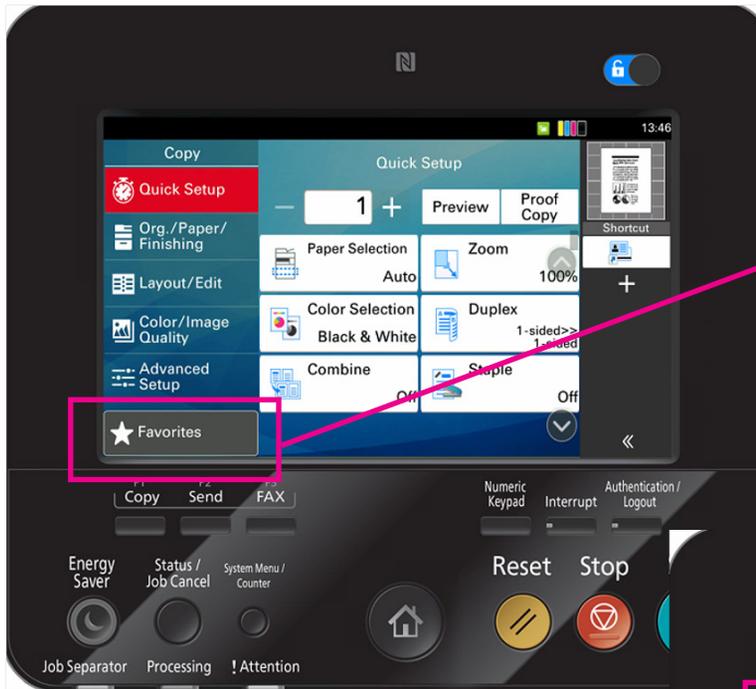

Favorites: Favorites are shortcut presets for copy job settings.
Create a new Favorite or recall a previously saved Favorite.

Inside the Favorites window shows existing Favorites. Click on Add/Edit to create a new Favorite or to Edit/delete an existing Favorite.

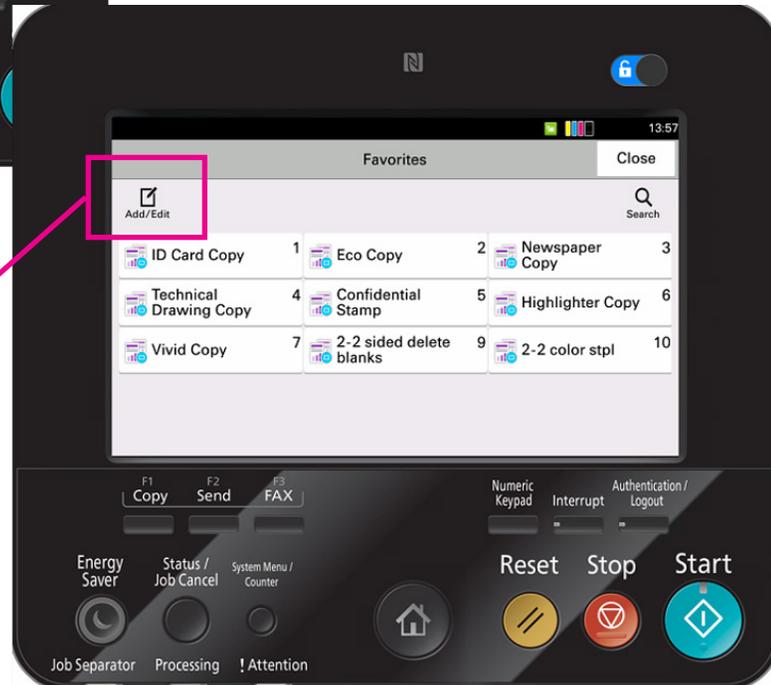

SEND

Send is used for scanning to various locations such as scanning to email or folder. The send application view includes a scrolling category list on the left.

The contents of the selected category will display on the right.




The default view is Destination. This Category Includes Enter Destination and One-Touch Destinations.

To add a destination from the Address Book click on the Address Book Icon. Or enter a destination manually.


Place documents face up in the document feeder or face down on the glass then Click Start to begin Scanning.

SEND



By clicking on the Address Book Icon you can add a new Address to the Address book. Click Add/Edit.

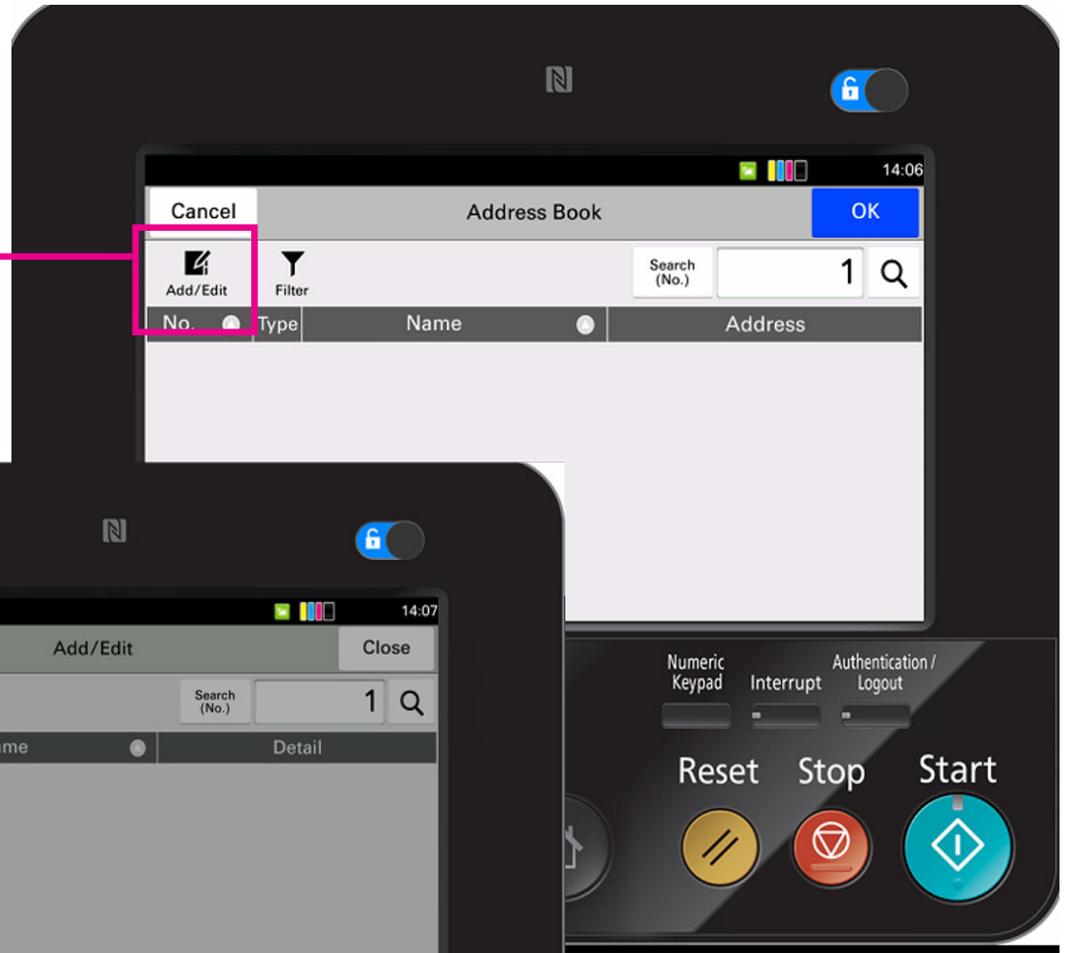

Choose Contact

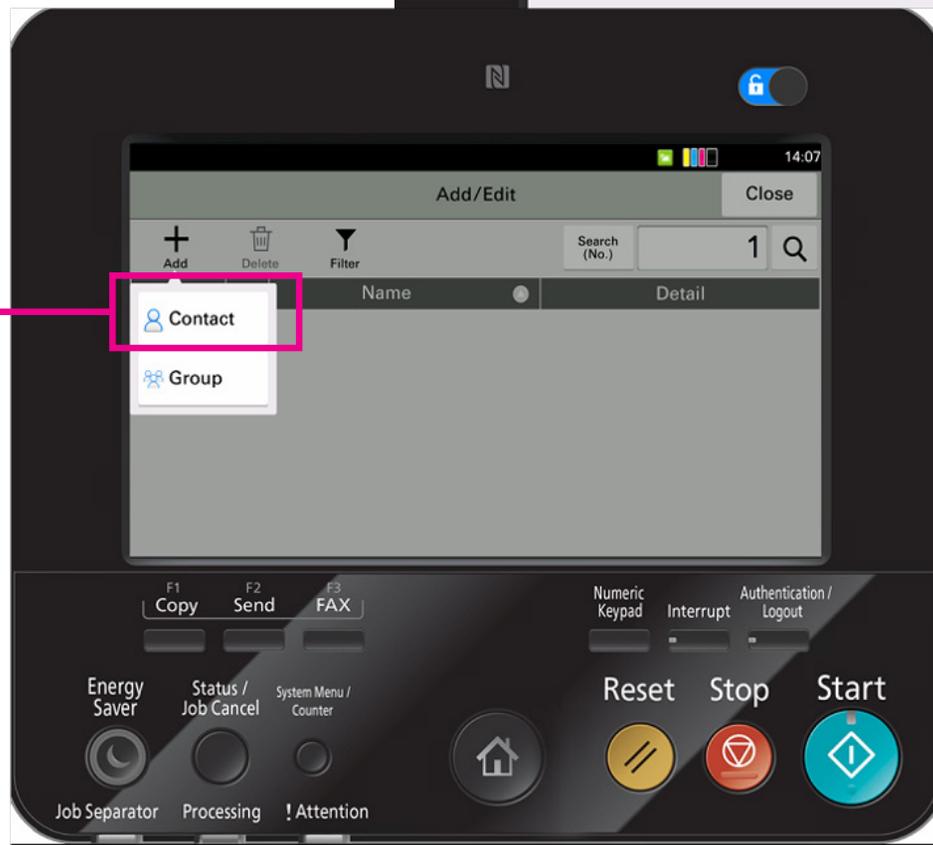


SEND

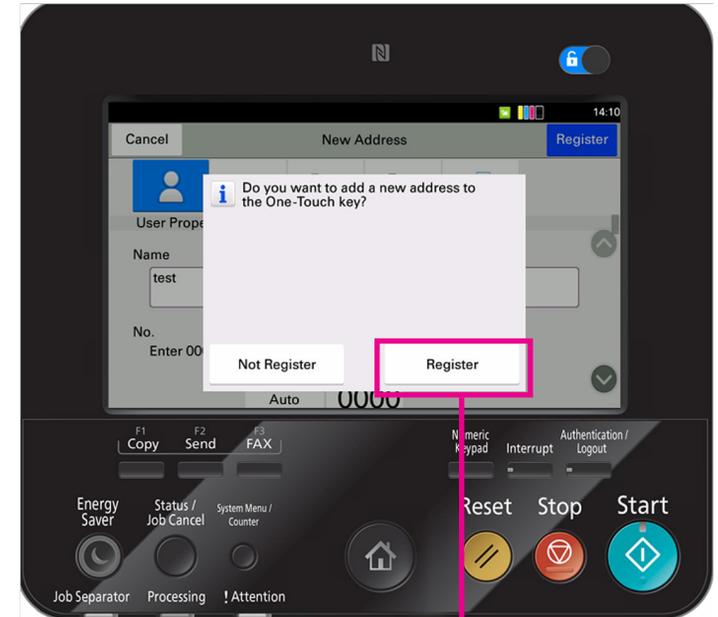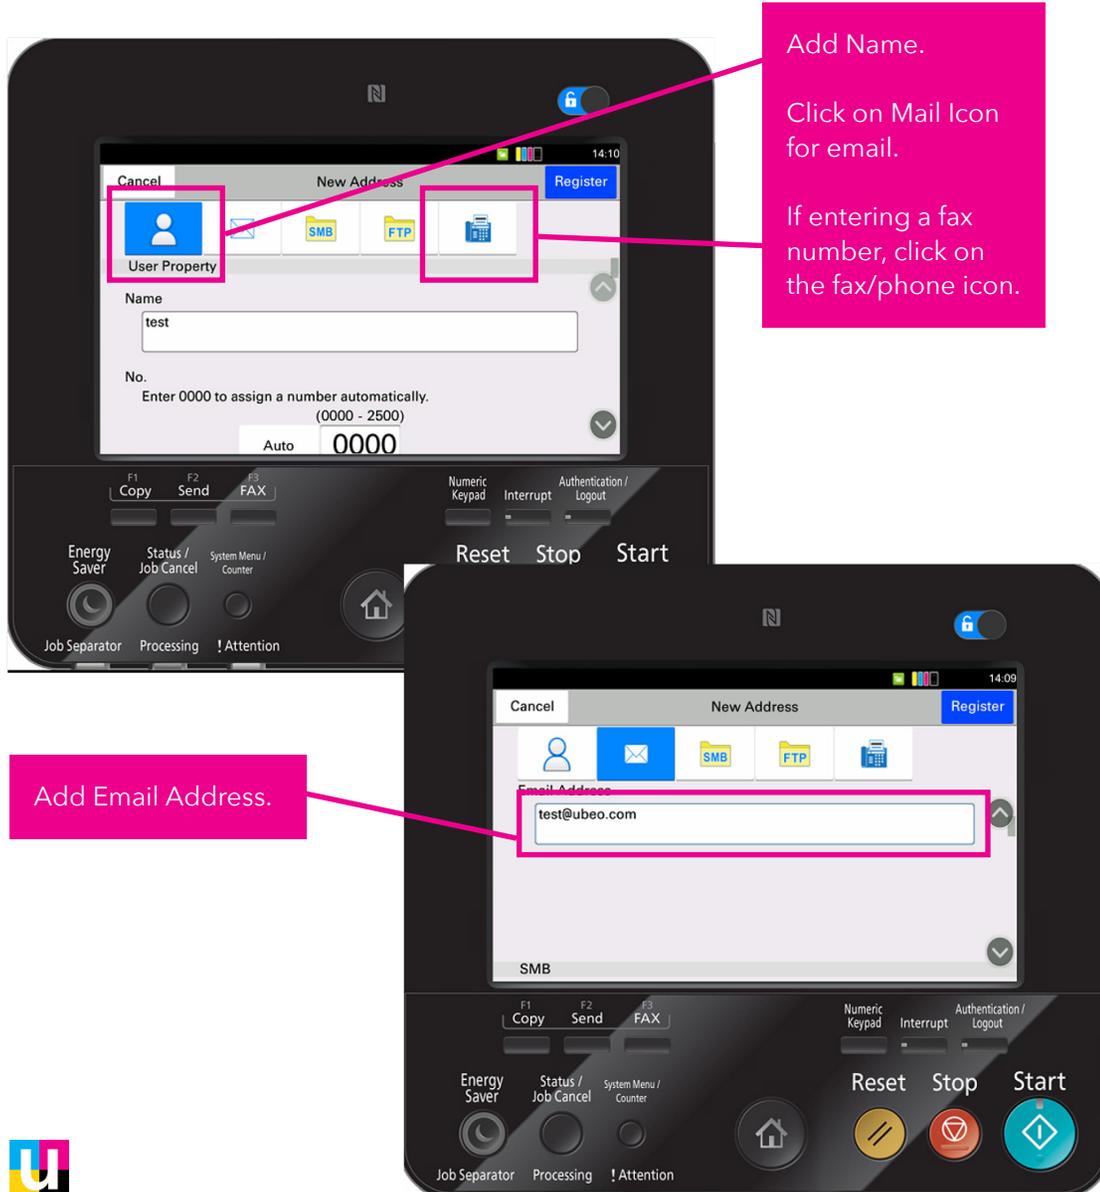


After registering a new email, it will prompt asking if you want to add to the One-Touch key.



SEND

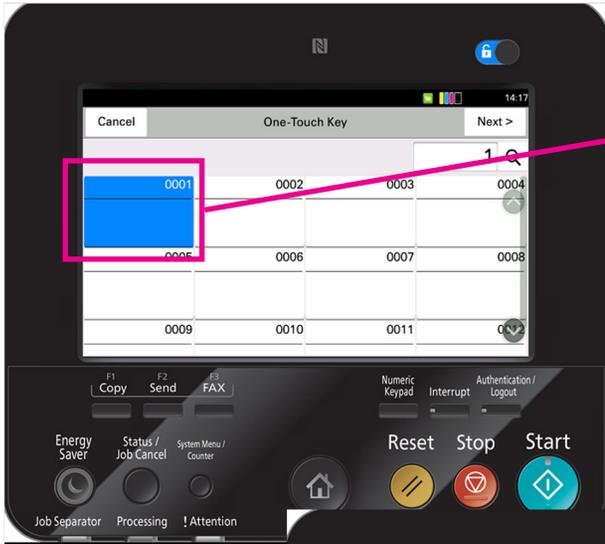


Next, Choose a One-Touch number.

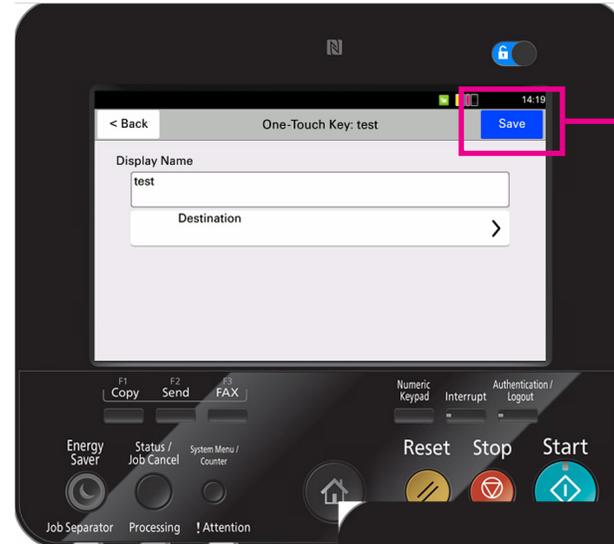


Click Save

Then Choose an email for that number.

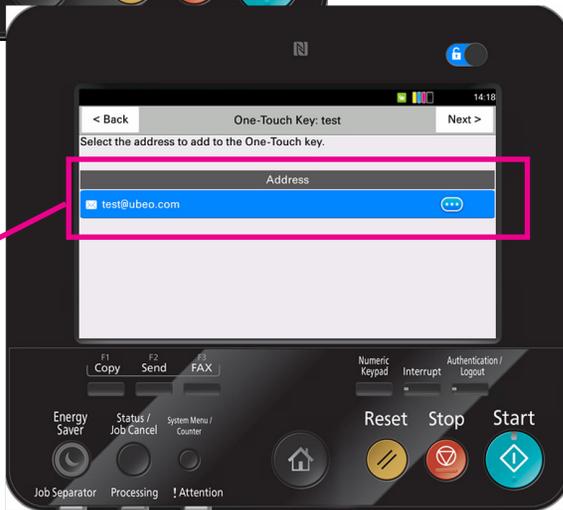

The One-Touch Destination will now show in the display.

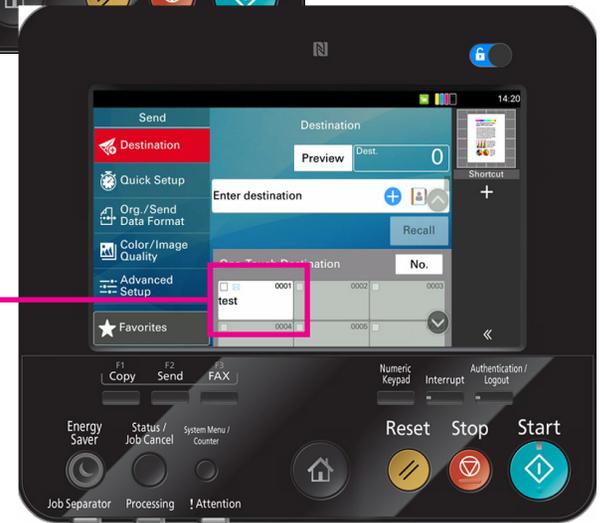

SEND

The image shows the control panel of a multifunction printer with a touchscreen interface. The screen displays the 'Send' menu with a 'Quick Setup' overlay. The 'Quick Setup' overlay includes a 'Preview' section with 'Dest. 1' and a 'Shortcut' icon. Below this are four settings cards: 'Color Selection' (Auto Color (Color/B&W)), 'Scan Resolution' (300 x 300 dpi), 'Density' (Normal), and 'File Format' (PDF). The 'Density' card also shows '2-sided/Book Original' and '1-sided' options. The 'File Format' card shows 'PDF' and 'High Compression PDF'. The physical control panel below the screen has buttons for 'F1 Copy', 'F2 Send', 'F3 FAX', 'Energy Saver', 'Status / Job Cancel', 'System Menu / Counter', 'Reset', 'Stop', and 'Start'. There are also indicators for 'Job Separator', 'Processing', and '! Attention'.

Quick Setup displays commonly used settings for scanning.

Color Selection includes Auto Color, Full Color or B&W scanning.

Density lightens or darkens the scan.

Continuous Scan is a job build feature. This is when using the glass and the feeder for a scan job or if the originals exceed the feeder capacity.


Scan Resolution includes resolutions from 100 to up to 600 dpi.

2 sided original/Book for various 2 sided originals and book original scanning.

File Format includes PDF, TIFF, High Compression PDF and more.

SEND



The Orig/Send Data Format category includes additional options related to originals such as Mixed Size Originals, Sending Size, and Original Orientation.

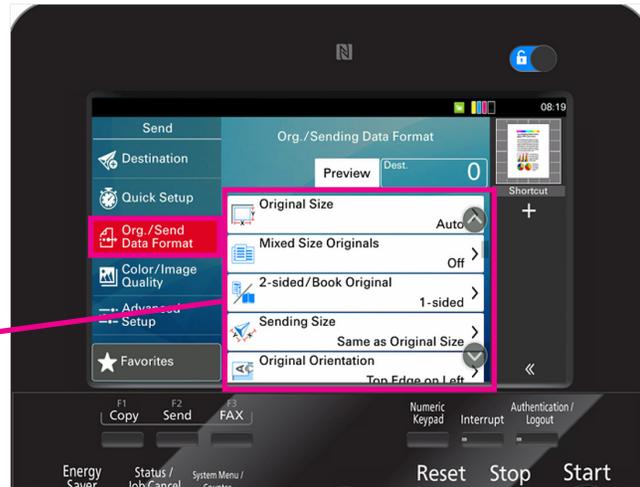

The Orig/Send Data Format also includes additional features such as Long Original and File Separation. File Separation separates pages into individual files.



Color/Image Quality includes additional options such as Sharpness, Background Density, Prevent Bleed-thru and Contrast.

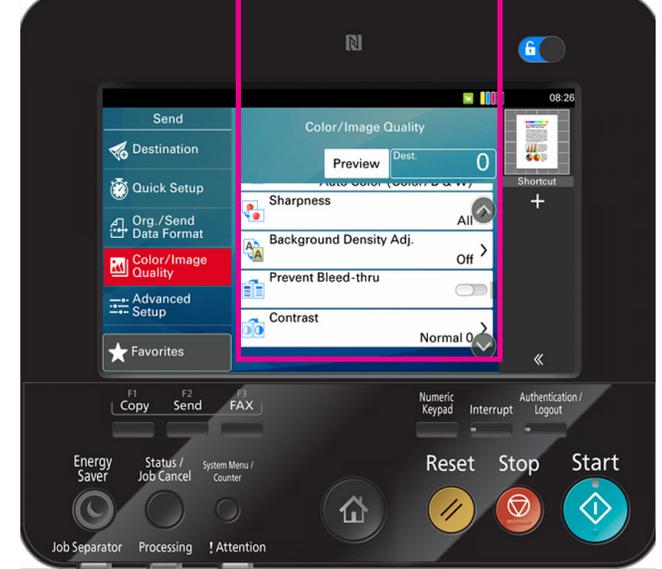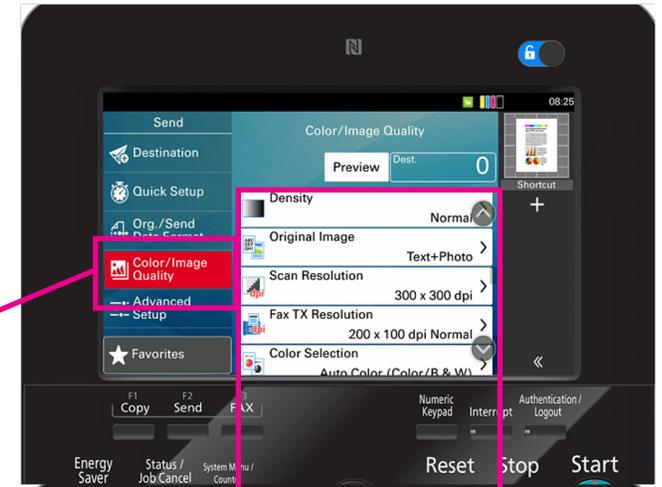

SEND



ADVANCED SETUP

FEATURES PAGE 1:

Advanced Setup includes additional features such as Border Erase/Full Scan, Erase Shadowed Areas and Job finish Notice.



ADVANCED SETUP

FEATURES PAGE 3:

Advanced Setup includes additional features such as Send and Print, Send and Store, and Text Stamp.



ADVANCED SETUP

FEATURES PAGE 2:

Advanced Setup includes additional features such as File Name Entry, Continuous scan (Job Building), Email Subject/Body, Centering.




ADVANCED SETUP

FEATURES PAGE 4:

Advanced Setup includes additional features such as Bates Stamp, File Size Confirmation, Skip Blank Page, Quiet Mode.


SEND

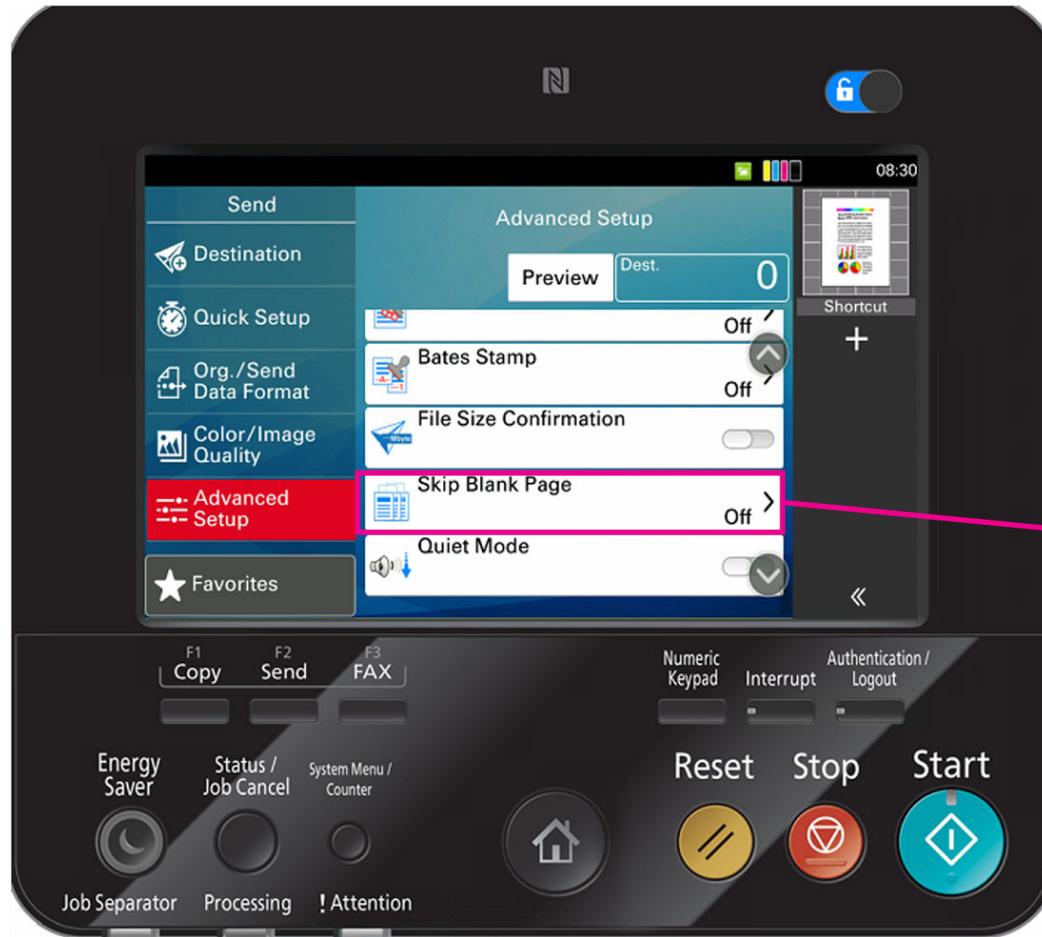

DELETE BLANK PAGES

To eliminate blank pages from documents when scanning mixed 1 and 2 sided documents, first choose 2 sided original from Quick Setup then turn on Skip Blank Pages.

SAVING FAVORITES

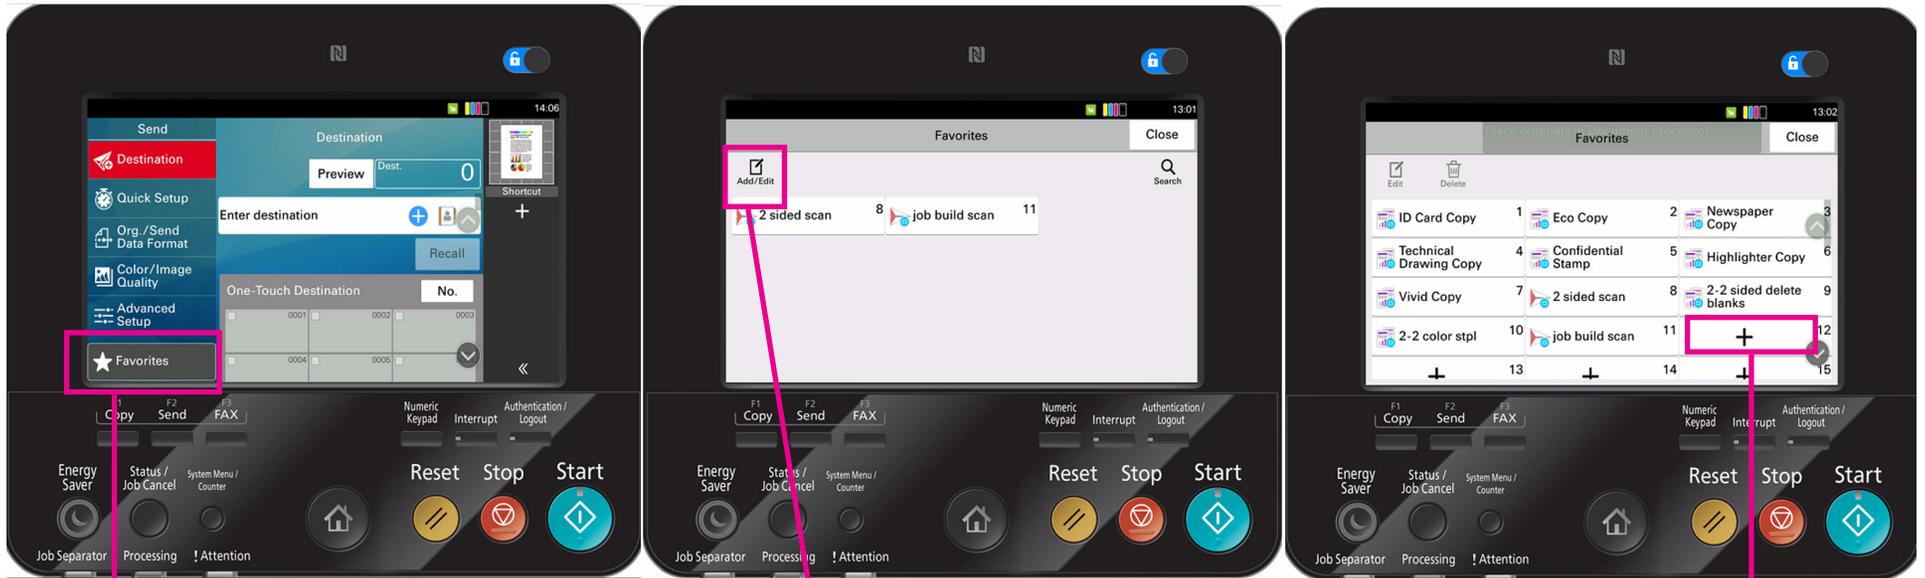

SAVING FAVORITES (THIS APPLIES TO COPY, SEND AND FAX)

Saving favorite settings is a time saver, especially for jobs that require several steps to setup. This can be done in either the Copy, Send or Fax. After setting up your job that you would like to save, Click on Favorites.

SAVING FAVORITES


Existing favorites for the particular app will display in the window. Click on an existing favorite to open it.

Click Add/Edit to add a new favorite.

SAVING FAVORITES

Now the favorites for all apps will appear. Click on an empty preset that shows a + sign

SAVING FAVORITES

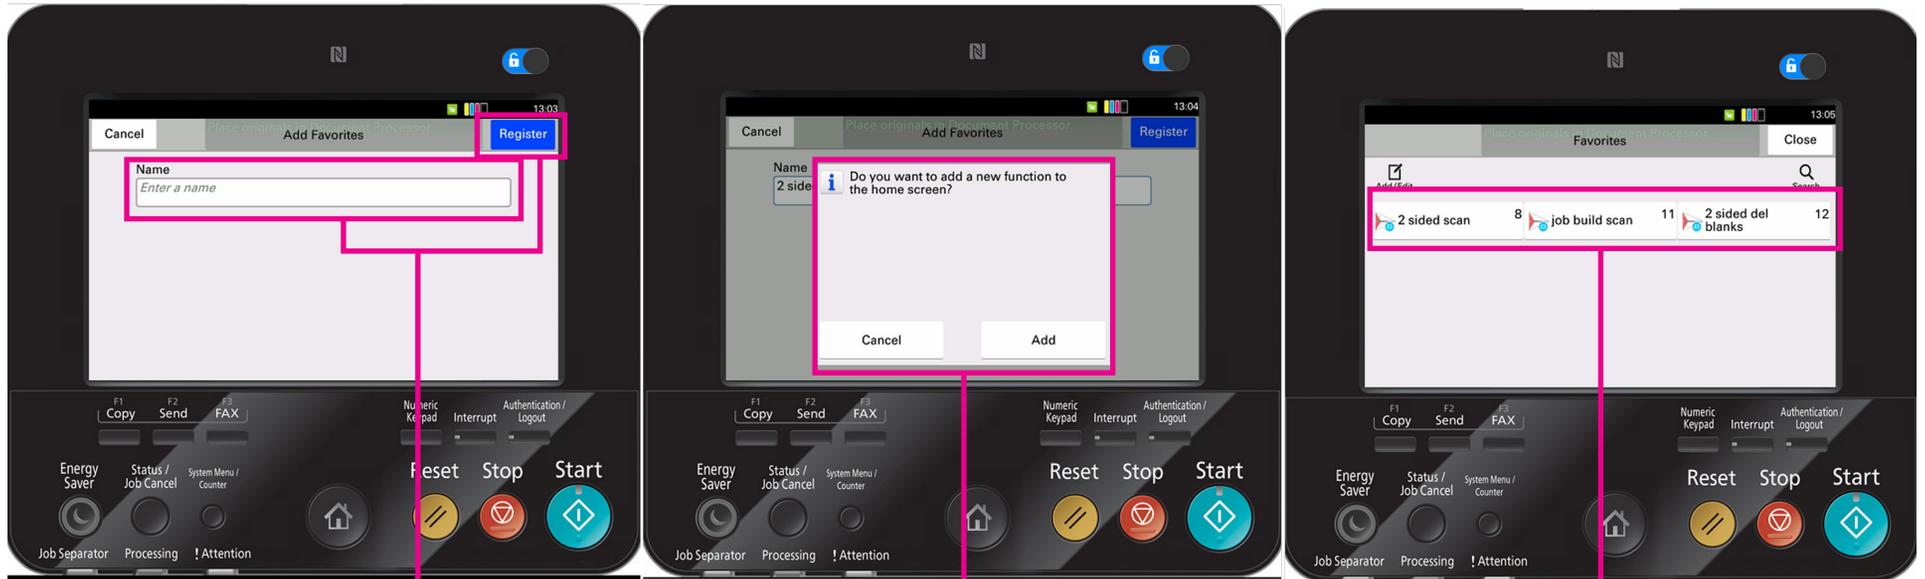

SAVING FAVORITES

Give the favorite a name and click Register.


SAVING FAVORITES

A prompt will ask if you would like to add this new favorite to the Home Screen. If you do not want to add to the home screen click cancel.

SAVING FAVORITES

The new favorite will now appear in the favorites window for that app.

FAX

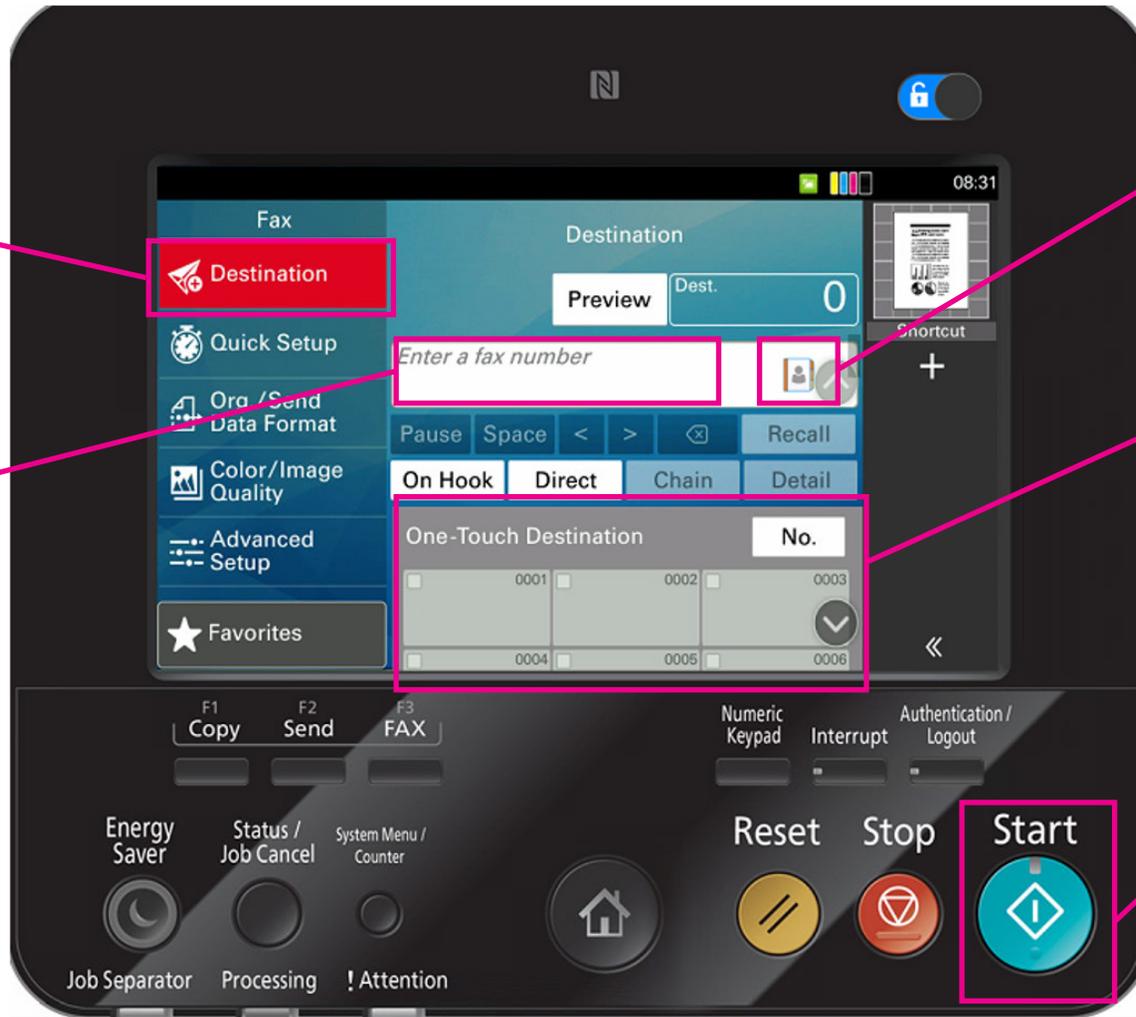

The Destination category is the default view.

Enter the number manually, add from address book or One-Touch Destination.

Address Book icon. Refer to pages 26-30 on how to add an address to the address book.

One-Touch Destinations

Load original in Document Feeder and press start to begin faxing.




FAX



The Quick Setup category shows common features and settings.


Original size is set to Auto read by default.

The resolution can be changed, density adjusted, the original changed from 1 sided to 2 sided, the type of original and continuous scan (job build) can be turned on.

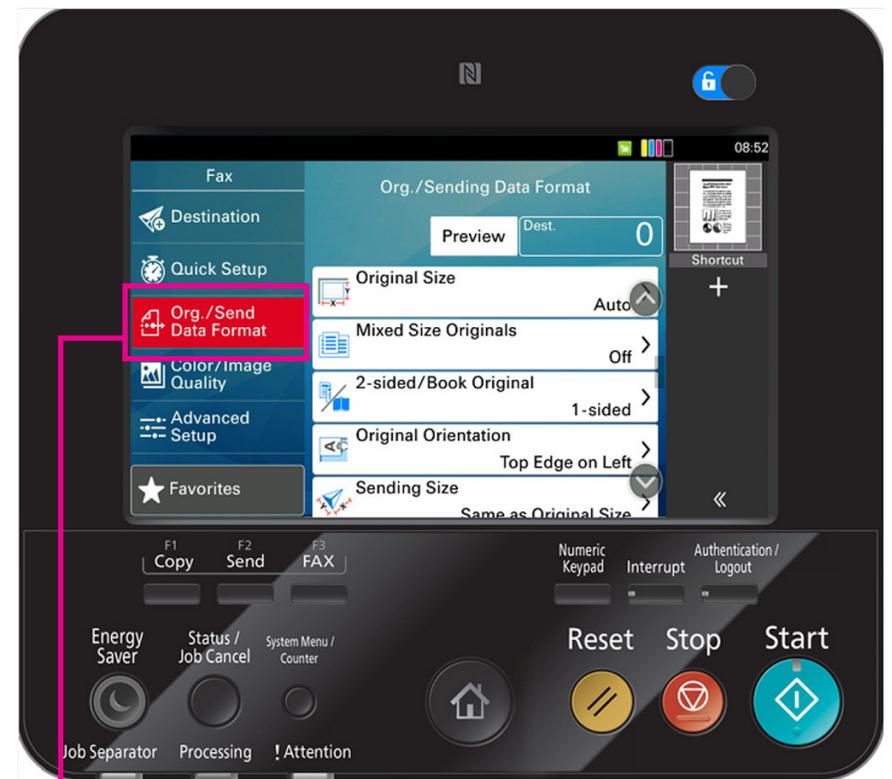


The Orig/Send Data Format category includes additional options such as Mixed size Originals, Original Orientation and sending document size.

FAX

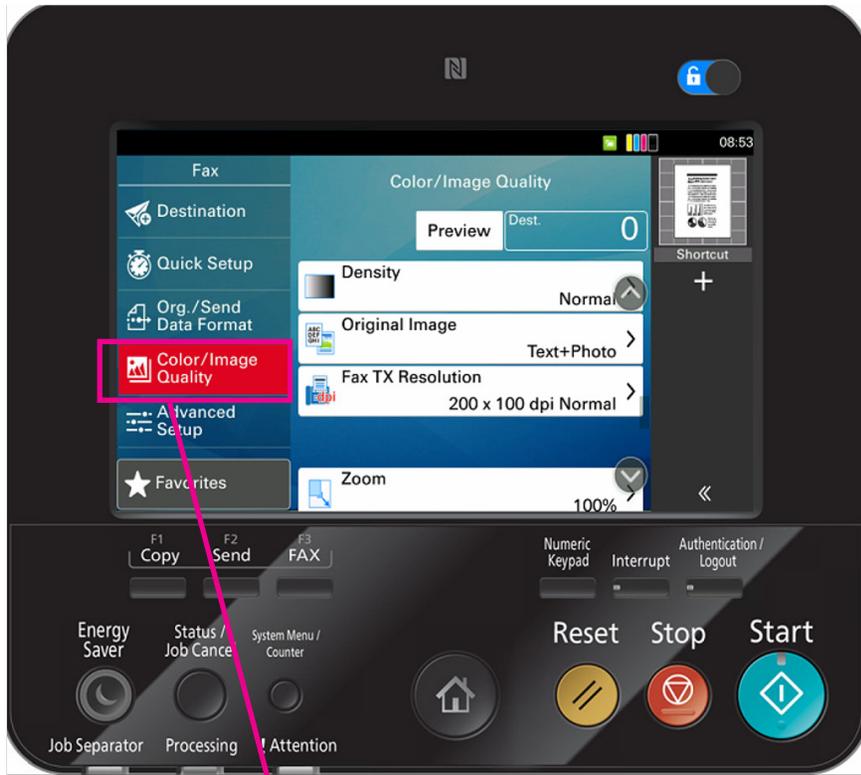

The Color/Image Quality category includes Density, Original Image type and fax resolution. These are also displayed on Quick Setup.

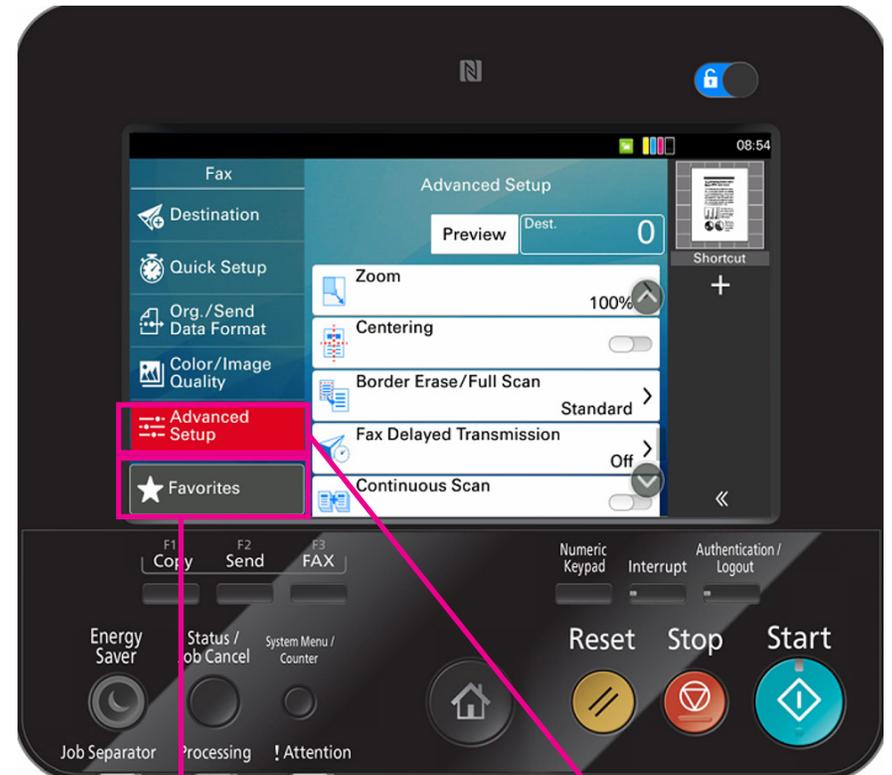

Refer to pages 39-44 for Saving Favorites.

The Advanced Setup category includes additional features such as image centering, border erase and delayed transmission.

FAX FORWARDING TO EMAIL

Inside System Menu choose Function settings.

To forward incoming faxes to a destination, click on System Menu.


Click on RX/Forward Rules.

Click on RX/Forward Rules/Fax Box


The first screenshot shows the 'System Menu' with the following items: WSD, DSM Scan, Address Book, One-Touch Key, Send and Forward, and RX/Forward Rules/Fax Box. The 'Function Settings' option is highlighted in red. The 'System Menu / Counter' button on the physical keypad is also highlighted.

The second screenshot shows the 'RX/Forward Rules/Fax Box' menu with the following items: RX/Forward Rules, Rule of forward setting, and Fax Box. The 'RX/Forward Rules' option is highlighted in red.


FAX FORWARDING TO EMAIL

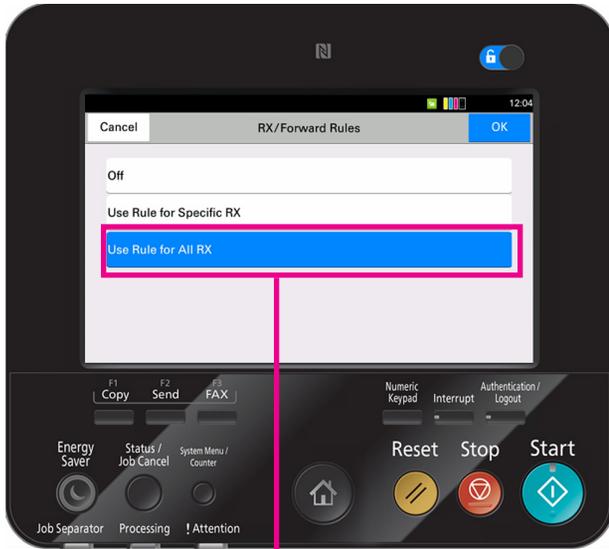

Choose Use Rule for All RX

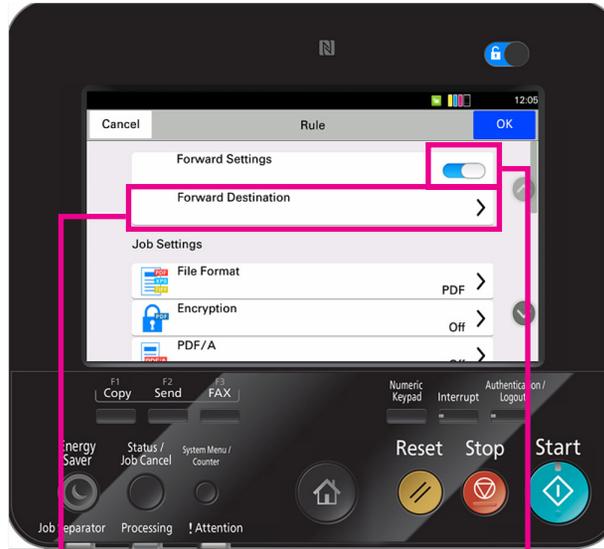

Turn on Forward Settings then click on Forward Destination.

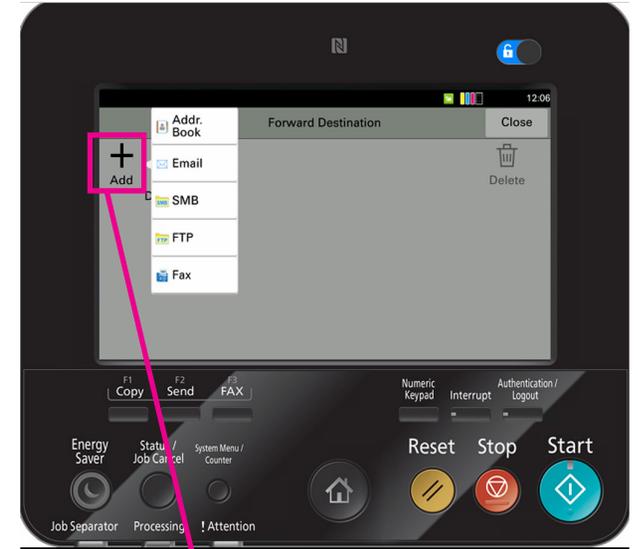


Add an email destination.

KX PRINT DRIVER OVERVIEW

The KX Driver for Windows® environments was the industry's first "single interface" print driver. This innovative design offers the same basic look and feel to the user regardless of the Windows operating system (OS.) This interface is also accessible with a Mac driver.

Click File/Print, choose the Kyocera KX driver then click on Properties.

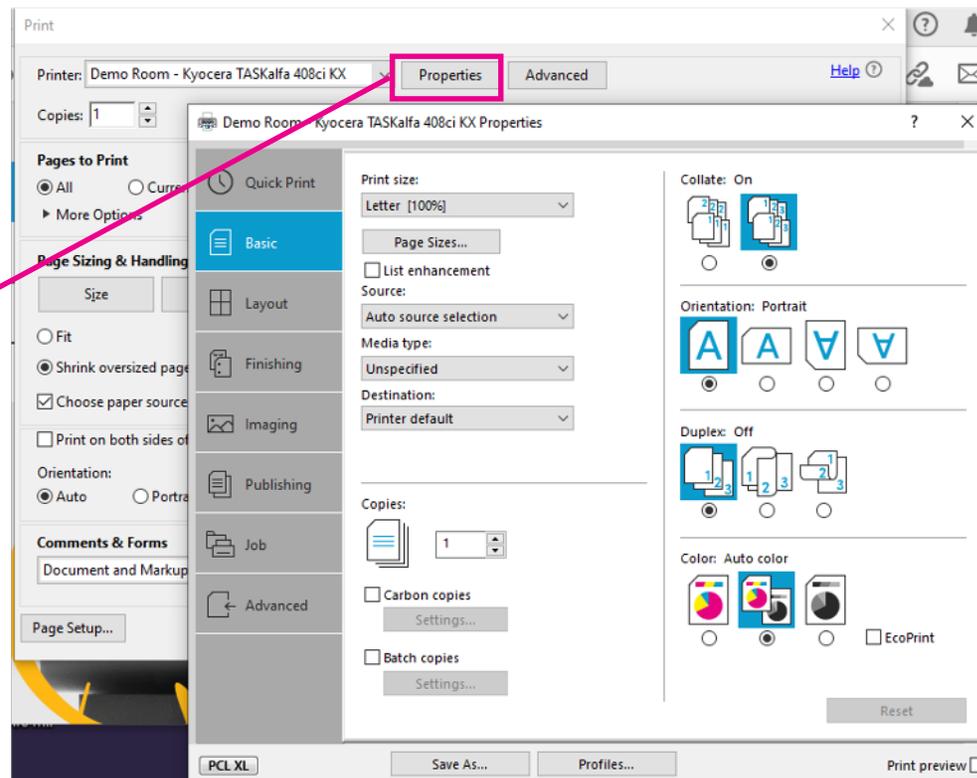

KX PRINT DRIVER OVERVIEW

The screenshot shows the 'Demo Room - Kyocera TASKalfa 408ci KX Properties' dialog box. It features a left sidebar with tabs: Quick Print, Basic, Layout, Finishing, Imaging, Publishing, Job, and Advanced. The 'Basic' tab is selected. The main area is divided into two columns. The left column contains settings for Print size (Letter [100%]), Page Sizes..., List enhancement, Source (Auto source selection), Media type (Unspecified), Destination (Printer default), Copies (1), Carbon copies, and Batch copies. The right column contains Collate (On), Orientation (Portrait), Duplex (Off), and Color (Auto color). At the bottom, there are buttons for Save As..., Profiles..., Print preview, OK, and Cancel. The Kyocera logo is at the bottom left.


The Basic Tab is the default view. This tab has the primary features all on one page.

The Left Column includes Print Size, Paper Source, Media Type, Output destination, number of copies, batch copies.

Save as and Profiles are for saving setting presets.


The Right Column includes Collating, Print Orientation, Duplexing, Color/B/W mode.

KX PRINT DRIVER OVERVIEW

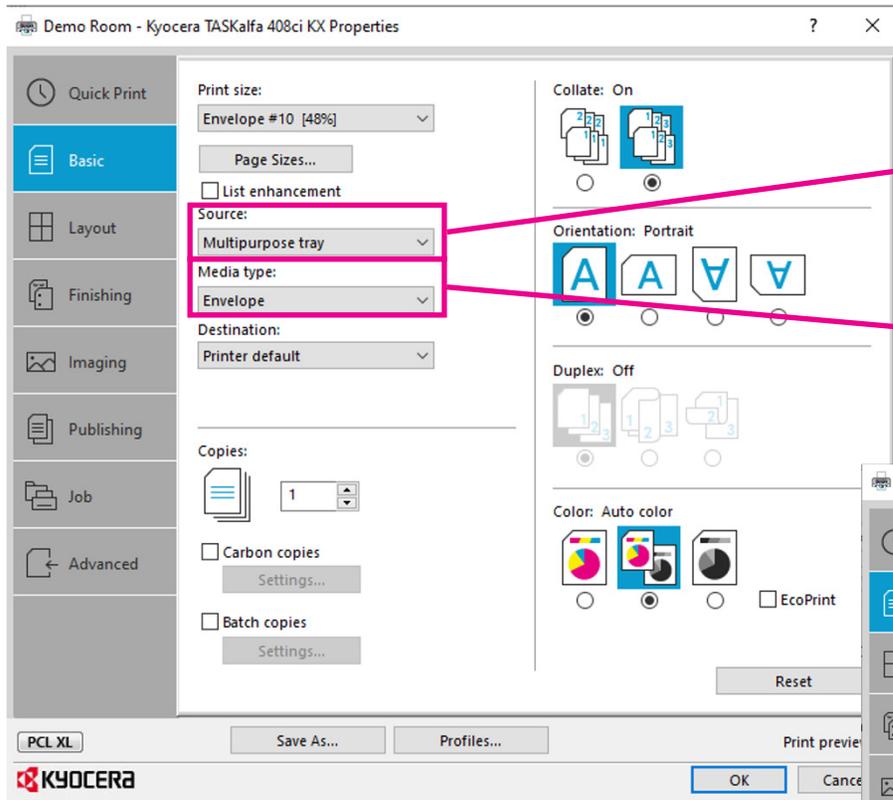


To change a paper source from auto, drop down and choose a cassette or the Multipurpose Tray.

Media Type includes a list of media options.

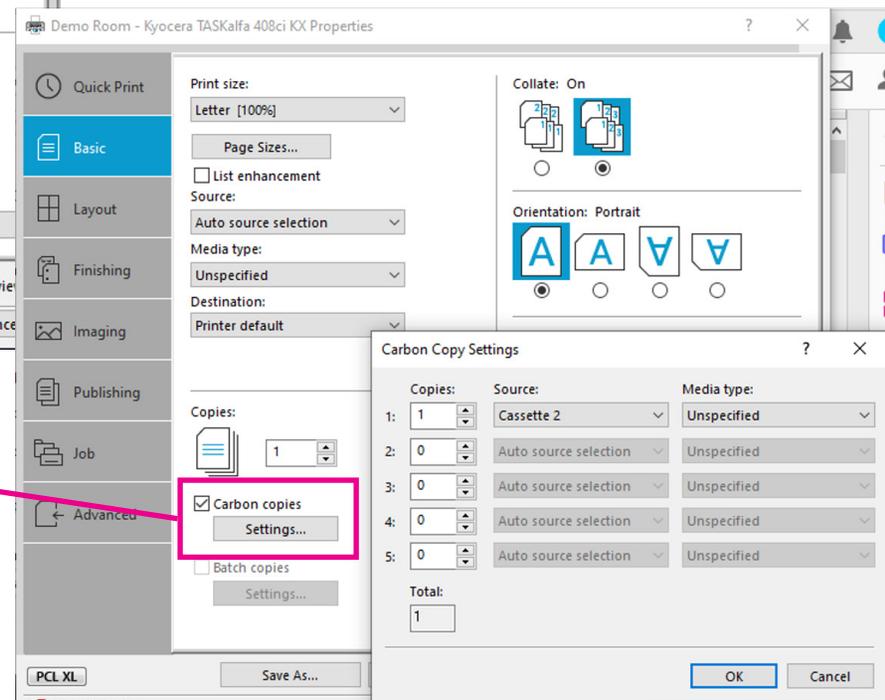

Carbon Copy option allows up to 5 different carbon copies.

KX PRINT DRIVER OVERVIEW


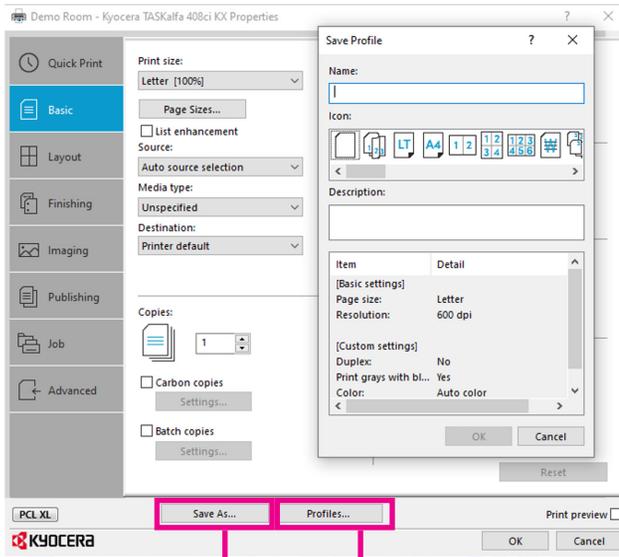


LAYOUT TAB
The left column includes combining multiple pages per sheet and Reduction/Enlargement.

LAYOUT TAB
The right column includes Poster mode creating booklets.

Save As creates Setting Presets for easy retrieval. After setting up a print job, click Save as then Name the job.


To retrieve the Saved Profile click on Profiles.

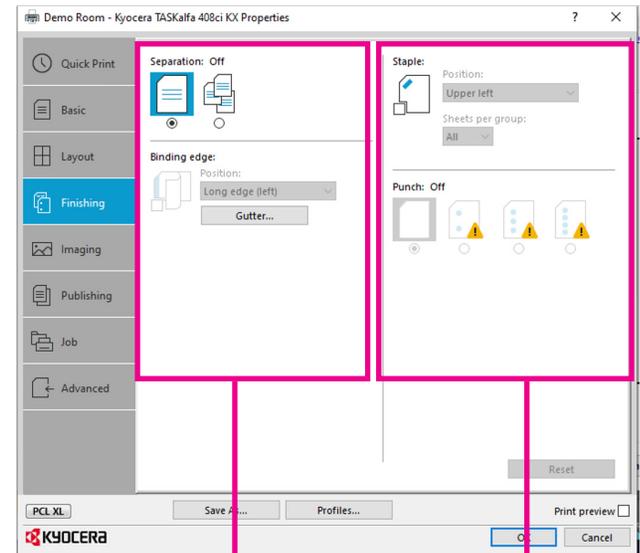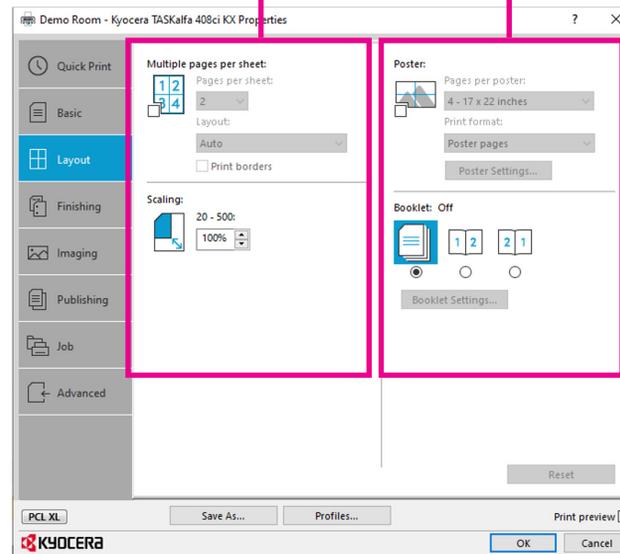

FINISHING TAB
The left column includes Separation (off-set) And Binding/ Gutter adjustment (adjusting the binding edge.)

FINISHING TAB
The right column includes Staple mode/position options and Hole Punching.

KX PRINT DRIVER OVERVIEW

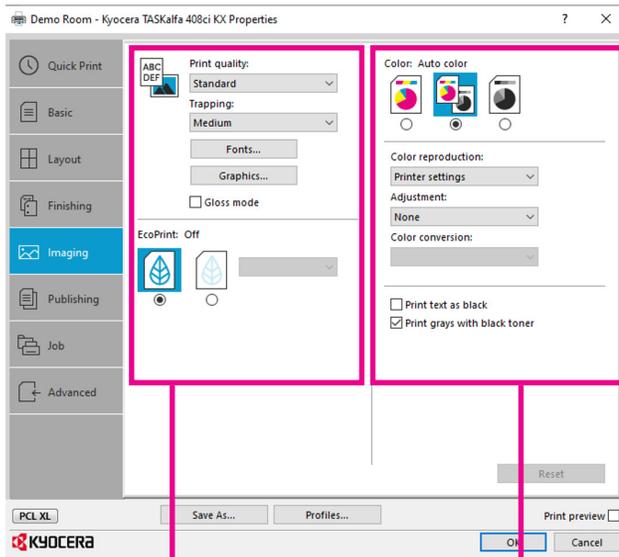

IMAGING TAB

The left column includes Print quality adjustment options and EcoPrint.

IMAGING TAB



The right column includes Color/Auto Color/BW selection and Color adjustments.

PUBLISHING TAB

The left column includes Cover insertion mode and Transparency Interleaving.

PUBLISHING TAB

The right column includes Page insertion and Chapter page insertion.

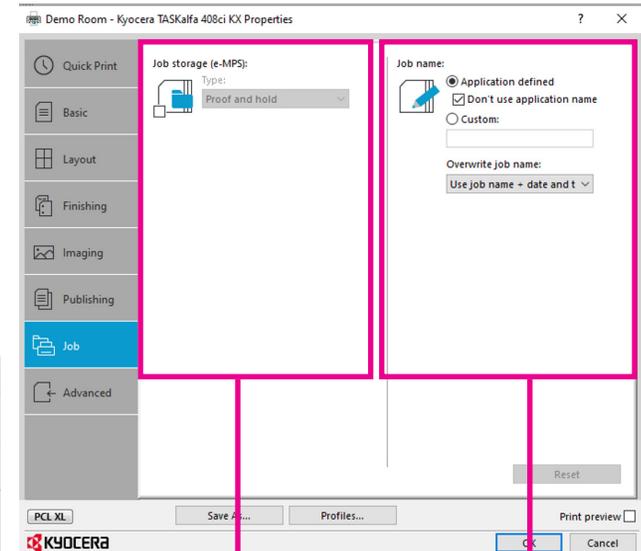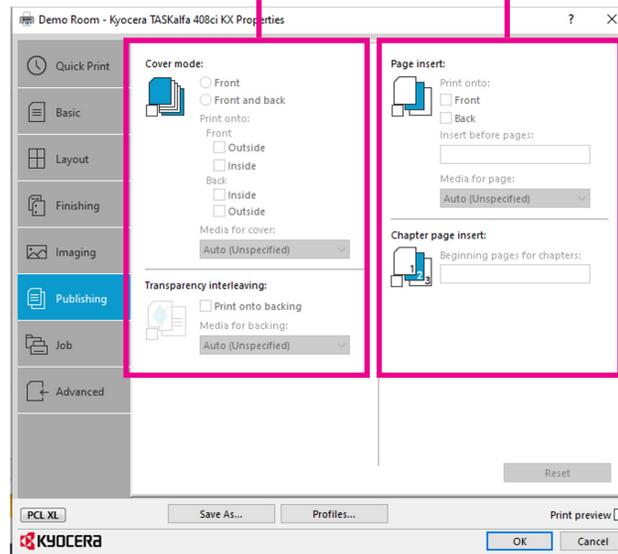


JOB TAB

The left column includes Job Storage options such as proof and hold and private print.

JOB TAB

The right column includes Job name options and customizing the job name.

KX PRINT DRIVER OVERVIEW

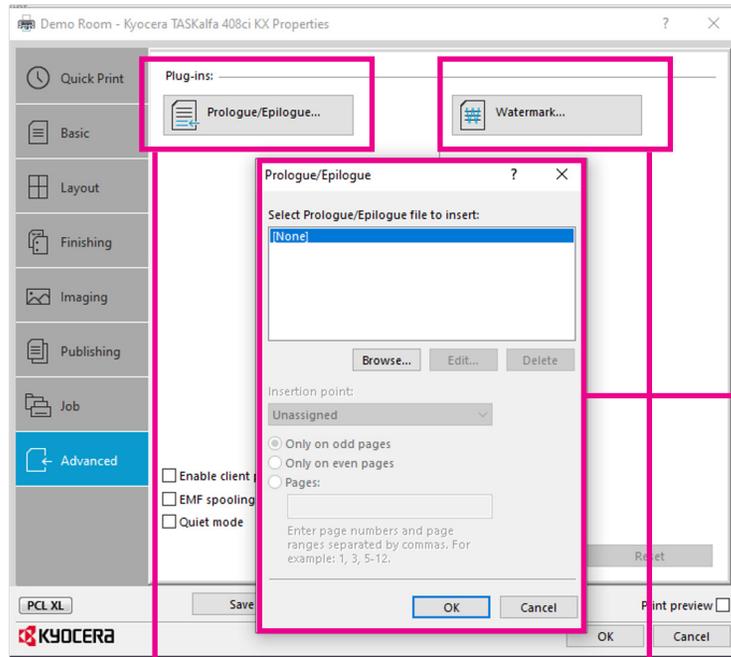

JOB TAB

The left column includes Prologue/Epilogue.

The right column includes Watermark options.

The Prologue/Epilogue feature lets you insert a command file at the beginning of a print job or at the end.

The command file, prepared in a text editor, utilizes programming commands from the printer resident PRESCRIBE language.


A command file is a set of instructions the printing system interprets to produce a given output. For example, a Prologue/Epilogue command file may contain a macro that places a graphic object such as a logo at the top of a letterhead document. Or a heading can be added to carbon copies when using the Carbon copies feature in the Basic tab.

A Prologue/Epilogue file must be available on your computer before it can be added to a print job.


To create this file, use a text editor like Windows Notepad.

KX PRINT DRIVER OVERVIEW

Accessing KX driver view on Mac

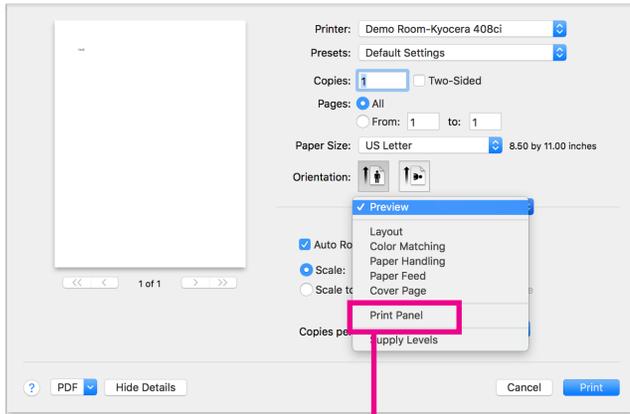


From the Mac driver click on the drop down that says Preview and choose Print Panel.

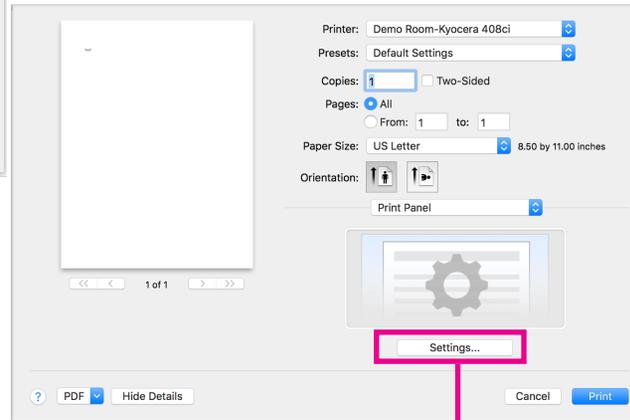

Next, Choose Settings.

After Choosing Setting, the KX driver look will appear with the same look and feature set.

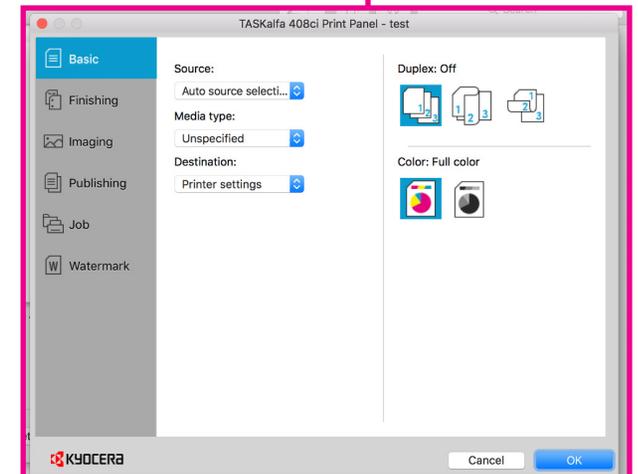



Need additional training?

Visit: ubeo.com/customer-service-request
or call 1.888.201.8431