Reference Guide: Lexmark Touch Screen



Table of Contents

1 Copying **Features Side Options Mixed Originals Custom Job** 8 Scan to Email **Features** Add Destination **Two-Sided Scan** Blank Page Removal Scan File Type Secure PDF **Custom Job** 16 Faxing **Features**

UDEO BUSINESS SERVICES

Transmission Log Two-Sided Original 20 Supplies and Status 21 Job Queue 22 Settings 23 Address Book Creating a Contact Creating a Group 27 USB Drive 28 Held Jobs 32 Card Copy 33 Shortcut Center

- **36** Google Drive
- 37 Print Driver & General Overview



Copying



Copying: Features



UDEO BUSINESS SERVICES

Copying: Features



At any time while in the copy screen (or Email screen) settings can be cleared back to the default settings by clicking the C button next to the touch screen.



Once you click the C button you will be prompted with this message. Choose yes to reset back to default settings.



Copying: Side Options



Step 1: Click on the "Sides" button in the main window.



Step 2: The default is 1 sided to 1 sided. To change, select another option.

Click the green Copy button to begin copying.



Copying: Mixed Originals





Copying: Mixed Originals



Step 4: Choose the size to copy to. Auto Size Match copies onto same size as each mixed original.

UDEO BUSINESS SERVICES

Copying: Custom Job



To build a copy job from the feeder and the glass OR if the quantity of originals exceeds the feeder capacity, click on Custom Job.

This will allow you to build your job.

The window shows detailed instructions. Click the green copy job to begin building your copy job.

UDEO BUSINESS SERVICES

Scan to Email



The E-mail screen includes a scrolling list of features on the left and a main window.

Main window includes: To destination, subject, message, filename and an address book.

UDEO BUSINESS SERVICES

From the home screen click on E-mail



Scan to Email: Features





Scan to Email: Add Destination



Scan to Email: Two-Sided Scanning

E-mail LexmarkXC4150demo@gm	ail.com	\star 🗄 Se	end				
Constant Scan Preview	Original Size	Mixed Size	s_				
Color Auto	PAGE SETUP		E-mail LexmarkXC4150demo@g	gmail.com		★ Send	
Content Text/Photo from Black and			C Scan Preview	Original Size		Mixed Sizes	D D
Solution Original 1 sided Mixed Sizes	Sides Orienta 1-Sided Portrai	tion Flip Style t Short Edge	Color Auto	PA SE SETUP			
Express Scanning Off O			Content Text/Photo from Black and	Sides	Orientation		
Resolution			Sided Mixed Sizes	2-Sided	Portrait	Long Edge	
Dedmose			Off Express Scanning				¢
			Resolution				

Step 1: If your originals are 2 sided, click on the Original button in the scrolling list.

Step 2: click on Sides.The Icon will then change to 2 sided.

UDEO BUSINESS SERVICES

After clicking on Sides, the icon will flip showing that it is ready to scan both sides.

Step 4: Click the green Send button to begin scanning

Scan to Email: Blank Page Removal

If originals are mixed 1 with and 2 sided and you would like to remove blank pages in the scan file:

After turning on 2 sided scan, scroll down, choose Blank Pages and click remove.





Scan to Email: Scan File Type

If you want to view or change the scan file type: Scroll down to Send As to view scan file type.

Click File Type to change. The file types will show in a new window and you can select from there.



Other features of Scan File Type are Highly Compressed, Secure file, Searchable PDF and jpeg quality.



Scan to Email: Scan File Type (Secure PDF)

If you want your scan to be sent as a password protected PDF:

Click on Secure and then enter a password.

This password will be needed to open the PDF after scanned.

E-m	nail LexmarkXC4150demo@gm	ail.com	*	1	Send	
	Resolution 300 dpi	· · · . · · · . · · · · · · · · · · · · · · · · · · ·				Do
٢	Darkness	Archival (PDF/A)				
	Send As	Searchable				
	PDF (.pdf)	SECURE PDF				þ
Ľ×	Do Not Remove	Password				
of	Custom Job Off	JPEG QUALITY				
Ц	Transmission Log	Best for content				Û
	Edua Franc					



Scan to Email: Scan File Type (Custom Job)



If you want to build a scan job from the feeder and the glass or if the quantity of originals exceeds the feeder capacity:

Scroll down to Custom Job. Click on Custom Job and turn On. This will allow you to build your job.



Faxing



Faxing Features



UDEO BUSINESS SERVICES

Faxing Features: Faxing Transmission Log



To print or email the log of fax transmissions: Scroll down and click on Transmission Log.

To change to email action click on Print. The Transmission log options include Print or Email.

Faxing Features: 2-Sided Original





Supplies / Status



For machine status and supplies, click on the Status/Supplies Icon

Supplies will display the current toner levels.

Trays displays

each tray's

corresponding

size and type of

paper.







Job Queue

If you'd like to see which jobs are active on your printer: Click Job Que





UDEO BUSINESS SERVICES

Settings





Address Book



From the Home page click on the Address Book Icon.





Address Book: Creating a Contact



Step 2: Options are to create a contact, a group, delete contacts or delete group. Select Create Contact.

Step 1: Click the 3 buttons on the right side of the address book line



Step 3: Inside the Create Contact screen fill out information and click the green save button.

UDEO BUSINESS SERVICES

Address Book: Creating a Group



Step 2: Options are to create a contact, a group, delete contacts or delete group. Select Create Group.

Step 1: Click the 3 buttons on the right side of the address book line



Step 3: Name the Group



Address Book: Creating a Group



Step 4: Click on a group to add an email to that group.

Click Add Members

UDEO BUSINESS SERVICES **Step 5:** Check a name or names to add to that group.

Accounting Department

Save

The display shows the 1 added member.

If you click the 3 buttons to the right, you see options to view group details, send an e-mail to the group or delete the group.

USB Drive



Step 1: To print from a USB drive, plug a flash drive into the USB slot located next to the touch panel. Then click on the USB Drive Icon.



Step 2: If a USB drive is plugged in, it will display the files. Print file types include image files (PDF, JPEG) as well as Office files (Word, Excel)





Within the print driver at your computer, there is an option to send jobs to the printer to be held until released at the machine.

Step 1: With a document open, choose file and print or ctl/p. Then choose Properties

Step 2: Within Properties, choose Print and Hold.







Step 4: Click Print

Step 3: Within Print and Hold click: Use Print and Hold Reserve Print Then click OK

Drinton Demo Room - Leymark C4150 Series VI	Advanced Help ?		
Printer: Demo Room - Cexman C4150 Series XC Properties	Advanced		
Copies: 1 Print in grayscale	(black and white)	-	
Save ink/toner	1		
Pages to Print	Comments & Forms		
All	Document and Markups 🗸		
○ Current page	Summaria Communts		
O Pages 1	Summanze comments		
More Options	Scale: 49%		
Page Sizing & Handling ①	8.5 x 11 Inches	ay or on the	
		e name, location,	
Size Poster Multiple Booklet			
Fit		id supplies	
O Actual size	Tend Strees Galle		
O Shrink oversized pages		to check.	
Custom Scale: 100 %			
	The second secon		
Choose paper source by PDF page size		iroup.	
Print on both sides of paper			
Flip on long edge	12 12 12 12 12 12 12 12 12 12 12 12 12 1		
Orientation:		ay or on the	
○ Auto portrait/landscape		formation.	
Portrait			
○ Landscape		Mar	
	<	ay or on the	
	Page 1 of 1		
De ses Cathur	Dirt	document.	
Page Setup	Print Cancel		











Card Copy



Step 1: Card copy is an application specifically for copying 2 sides of a card onto 1 side of paper.

Click on Card Copy.

Step 2: Instructions are displayed in the app. Options are to print a copy, send to email, send to a network folder and change the scan settings.





Shortcut Center



Shortcut Center

Copy Shortcuts Save Pages per Side 2 Content 20 Text from Black and White.. 0 20 Paper Setup X 1 sided to 1 sided Off \Box On Auto Express Scanning ٥ Letter (8.5 x 11 in.) Custom Job Letter (8.5 x 11 in.) Auto - 100% Plain Paper Tray Collate On [1,2,1,2,1,2] Default (

Step 3: Shortcut screens look identical to the Copy, E-mail, and Fax screens. Set up desired features and click the green Save Button. **Step 4:** After saving, you will be prompted to name your shortcut. This illustration shows a copy shortcut for 2 sided auto color.





Scan Center



Google Drive

÷		10.100.122.121		Guest
			alat	C
Сору	E-mail	Fax	Status/Supplies	Job Queue
x	@			
Settings	Address Book	USB Drive	Held Jobs	Card Copy
*				
Shortcut Center	Scan Center	Google Drive		

Google Drive allows scanning to specific Google Drives. Please contact your network administrator, the Lexmark Administrator guide to set up.



Printer: Demo Room	- Lexmark XC4150 Printer Softw	Properties	Advanced	Help 🗇
Copies: 1		Prin in grayscale	(black and white)	
		Sav ink/toner	•	
All			Comments & Forms	
O Current page			Contract and Markups	~
O Pages 1 - 18		-	Summarize Comments	
More Options			Scale: 73%	 Rectarge
Page Sizing & Handli	ing (i)		8.5 x 11 Inches	
Sjze	Poster Multiple	looklet		
Fit				
O Actual size				
O Shrink oversized pa	ages			
O Custom Scale:	100 %		1	
Choose paper sour	rce by PDF page si <u>z</u> e			
Print on <u>b</u> oth sides	s of paper		Cust	omer Portal
Orientation:			No Para	
O Auto po <u>r</u> trait/land	scape			
Portrait				
○ Landscape				
			<	>
			Dege 1 of 10	- 1
Page Setup			Print	Cancel
3-2				
	Choos		Drint or ctl/r	
	Choos	e File/	Print or ctl/p)
	Choos	e File/	Print or ctl/p)
	Choose	e File/	Print or ctl/p	
	Choos Click	e File/I	Print or ctl/p For more)
	Choos Click	e File/I Print.	Print or ctl/p For more)
	Choos Click	e File/I	Print or ctl/p For more	
	Choos Click options,	e File/I Print.	Print or ctl/p For more on Prope <u>rtie</u>) :S.
	Choos Click options,	e File/ Print.	Print or ctl/p For more on Propertie) 95.
	Choos Click options,	e File/I Print. click o	Print or ctl/p For more on Propertie) 95.
	Choos Click options,	e File/I Print. click o	Print or ctl/p For more on Propertie) 95.
	Choos Click options,	e File/I Print. click d	Print or ctl/p For more on Propertie) ?S.
	Choos Click options,	e File/I Print. click d	Print or ctl/p For more on Propertie) 95.
	Choos Click options,	e File/I Print. click o	Print or ctl/p For more on Propertie) ?S.
	Choos Click options,	e File/I Print. click (Print or ctl/p For more on Propertie) 95.

UDEO BUSINESS SERVICES

This is the Properties Window. Click on the Tabs to see options.



The Layout Tab includes options such as page layout and 2 sided printing.

to save settings as a preset for future use.



The Paper/Finishing Tab includes paper size/type and Finishing (Stapling.)

Toner Darkness	Resolution:	
Use printer setting	4800 CO ~	
O Use toner darkness	Halftone:	. Gö
Value: 4	Use printer setting $\qquad \lor$	
	ColorSaver™;	[Settings summary]
Lightest Darkest	Use printer setting $\qquad \lor$	Printer model: Lexmark XC4100 Series Copies:
Print text as black	RGB Correction	1 Paper size
Print in black and white	Use printer setting \checkmark	Letter (8 1/2 x 11 in)
	Brightness: 0	Use printer settings
		Automatically Select
	Contrast: 0	< >
Edit Color Correction		Print Settings
Edit Color Balance	Saturation: 0	Load settings:
		(None) \vee
		Save
		Manage Settings

The Quality Tab includes toner darkness options, print resolution and color correction.



	Paper/Finishing Quality	Watermark	Overlays	Print and Hold	Other Options		
Do Use	not use watermarks the same watermark on a	all pages		Sample			-
	(None)		\sim				
Use	e a different watermark on	the first page					
F	First page;					[Settings su	mmary]
	(None)		\sim			Printer mod	lel:
	Other pages:					Copies:	
	(None)		\sim			Paper size:	
Use	e a different watermark on	odd/even pag	es			Paper type	(8 1/2 x 11 in) :
	Odd pages:					Use pr Paper source	inter settings ce/tray:
	(None)					Autom	atically Select 🗸 🗸
E	iven pages:					<	>
	(None)		\sim			Print Settin	gs
						Load settin	igs:
						(None)	~
1							
1							Save

The Watermark tab includes various watermark options.

out Paper/Finishing Quality Watermark Overlays Print and Hold Other Options	s
) Do not use overlays) Use the same overlay on all pages (None)	-
) Use a different overlay on the first page	
First page:	[Settings summary]
(None) V	Printer model:
Other pages;	Copies:
(None)	1 Paner size:
(inite)	Letter (8 1/2 x 11 in)
) Use a different overlay on odd/even pages	Use printer settings
odu pages;	Paper source/tray:
(None)	Quality:
Even pages:	< <u>></u>
(None) \lor	Print Settings
	Load settings:
	(None) V
Overlay Placement	Save
Over the page's images	
○ Under the page's images	Manage Settings

The Overlays Tab includes various image overlays options.





The Hold Print Tab includes options for holding a print job, holding a confidential print job and reserving a print job for reprint.

TrueT	Paper/Finishing ype Fonts	Quality Water	mark Overl	ays Print and Hold	Other Options		
Outli	nes	~			Earl Job Accounting	× @	
Image	e Compression					[Settings summary]	
C Er	nable Image Comp uality: 90	pression		Metafile spool	ina:	Printer model: Lexmark XC4100 Seri Copies:	es ^
				Automatic		Paper size:	
Lowe	est		Highest			Letter (8 1/2 x 11 in) Paper type: Use printer settings	
						Paper source/tray: Automatically Select Orgality:	~
						<	>
						Print Settings Load settings:	
						(None)	\sim
						Save	
						Manage Settings	

The Other Options Tab includes image compression, spooling options, font printing options and job accounting if enabled.



